



BRUSH CLEANER DEGREASER



PRODUCT USES

It effectively cleans brushes and rollers used for applying most decorative paints, but epoxy and other catalysed paints require a stronger solvent such as Dulux Trade Heavy Duty Thinners.

NOTE: Brushes and rollers which have been used for emulsion paint (PVA) are cleaned with tap water.

Fixit Brush Cleaner / Degreaser is also recommended as a general purpose degreaser for removing oil, wax and grease from floors, wall areas and car engines (e.g. before repainting a stoep which has been wax-polished).



FEATURES AND BENEFITS

Simple to use – only two steps – dip the paint brush or roller into **Fixit** Brush Cleaner / Degreaser, then flush with water.

No mess – unique coupling action of **Fixit** Brush Cleaner / Degreaser allows oil paint to wash easily and cleanly under the tap – no dirty sinks or wash basins.

Saves money – very little waste – only small amounts needed to do a perfect cleaning job.

Saves time – only one treatment required, while conventional thinners such as Turps require at least two.

Good for brushes – keeps bristles soft because they are thoroughly cleaned.

Restores hardened brushes - **Fixit** Brush Cleaner / Degreaser is very slow evaporating, and can be left in open containers to soften and remove old paint from brushes.

As a degreaser, simply spray or brush onto garage floors, car engines etc., leave a while, then flush off with water.



PRODUCT INFORMATION

Appearance	Clear Liquid
Density at 23°C	Approx. : 0.90 kg/L
Solids Content	By weight : Approx. 17%
	By volume : Approx. 15%
Water Miscibility	Yes
Packaged Viscosity	Viscosity at 23°C : Approx 2.9c St

Designed for cleaning and maintaining paint brushes and rollers. Also a general purpose degreaser



500ml

1L



APPLICATION INFORMATION

How to use as a Brush Cleaner

Remove as much paint as possible from the brush or roller by mechanical or other means (scrape off, or use old newspaper, etc.).

For brushes: Pour a small amount of **Fixit Brush Cleaner / Degreaser** into a saucer or old tin. Work the bristles well into cleaner. Rinse under running water, working the bristles between fingers until clear.

For rollers: First clean out the paint tray, and then pour in a small amount of **Fixit Brush Cleaner / Degreaser**. Work the roller into liquid, then squeeze out excess, and rinse under running water until clear.

Hardened brushes or rollers should be soaked in **Fixit Brush Cleaner / Degreaser** for 14 days or even longer. When softened, remove paint particles by wire brushing, and rinse under running water until clear.

How to use as General Purpose Degreaser

Garage floors, Stoeps, Car Engines: Spray or brush onto contaminated areas, and then hose down with water. Severe or old contamination (e.g. old wax polish) may need scrubbing or prolonged soaking before flushing.

Walls, Cupboards, Furniture and Windows: Moisten cloth with cleaner, wipe the surface thoroughly and then rinse off with water. Test on an insignificant area to avoid damage to sensitive finishes.

Carpets, Curtains and other Fabrics: Test an insignificant or hidden area first, especially for synthetic or coloured fabric, and latex-backed carpets. Wet the soiled area with **Fixit Brush Cleaner / Degreaser**, then rinse with water.



HEALTH AND SAFETY INFORMATION

For detailed safety information refer to Material Safety Data Sheet.

Keep out of reach of children and animals.

Do not smoke, eat or drink whilst handling.

Apply only in well-ventilated areas. In case of inadequate ventilation, respiratory protection must be worn.

Users should wear protective clothing such as at least gloves and goggles.

Avoid splashes into eyes – in case of accident, rinse immediately with water, and if any pain or irritation remains, seek medical attention.

Splashes on the skin must be flushed with plenty of water (and soap, if available).

Do NOT empty into storm water drains, rivers or watercourses.

Flash Point 42°C



ADDITIONAL INFORMATION

Storage Conditions

Store under cool dry conditions.



500ml

1L